+48v to 52v

PHANTOM SW-SPST

PAD SW-SPST

PHASE SW-SPST

R? 10k

LED

0v

ALL RESISTORS AS MARKED ON PCB & 24v RELAYS

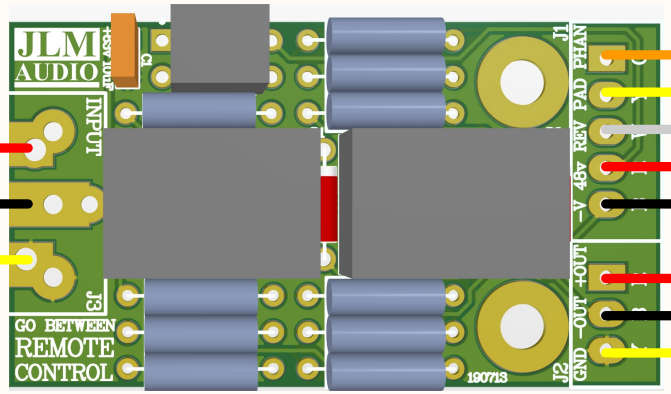

INPUT XLR IN+ PIN2

INPUT XLR IN- PIN3

INPUT XLR 0v PIN1

+OUT TO MIC PRE IN+

-OUT TO MIC PRE IN-

0v GND Power supply

LINK 0v & -V

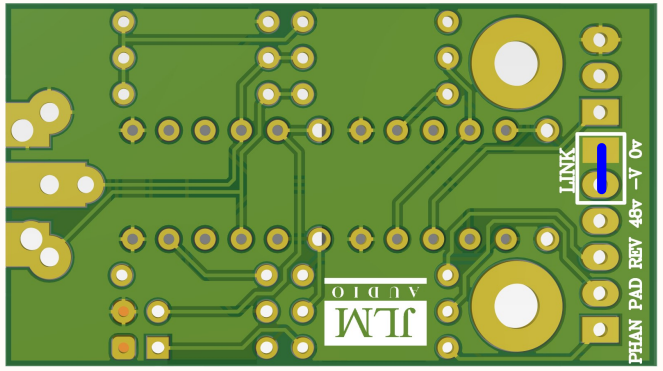

LINK 0v & -V

Title: GO Between RC switching control from +48v		
Size: A4	Number:	Revision:
Date: 16/08/2019	Sheet 1 of 1	